


# SHAD

## DUCATI MONSTER 821 '17-'20 SIDE BAG HOLDER DOMN87SE



1 262210 x1 →  
262211 x1 ←




2 261451 x4  
Ø18 Ø12,5 Ø9  
x 17-14



3 303017 x4  
Ø6



4 304201 x4  
M6 x 40  
Din 7380

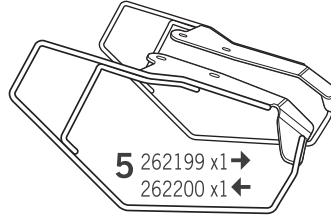

5 262199 x1 →  
262200 x1 ←



6 303045 x8  
Ø8



7 304028 x4  
M8 x 25  
Din 7380



8 302024 x4  
M8

### ! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

