


SHAD

HONDA CB 650 F '14 KIT TOP HOCF64ST

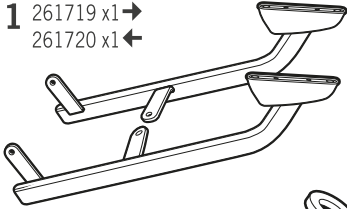

1 261719 x1 →
261720 x1 ←



2 260760 x2
Ø20 Ø11 x 16



3 303025 x2
Ø10



4 304209 x2
M10 x 45



5 304036 x2
M8 x 45 Din 7380



6 303020 x2
Ø8



7 260417 x2
Ø16 Ø9 x 16



8 303018 x4
Ø8



9 304081 x4
M8 x 20 Din 7380



! WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system before the top master.

